


A: How To Replace A Rib
Remove the two screws that coincide with damaged rib. Then remove the half plate and lift the rib out.

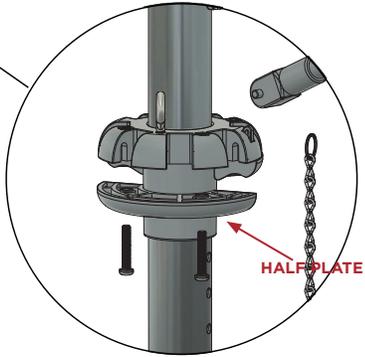

A(2): How To Replace A Rib
Repeat this on the runner and remove the half plate to lift out the damaged rib.